



Installer / Windows® Printer Driver Instructions

Kiaro! QL-120, Kiaro!, Kiaro! D, Kiaro! 200, Kiaro! 200D, Kiaro! 50, Kiaro! 50D, QL-111

1. Click the **Download** button and save the file to your desktop.
2. When it finishes downloading, **Run** the executable by double-clicking on the file that you saved.
3. Choose to **Extract** the files to your desktop and a new folder with the same name as the original file you downloaded will be created on your desktop.
4. Double-click on this folder and then double-click the **setup.exe** file to run the installation program.
5. Click the **Install/Uninstall Driver** button to install the Windows® printer drivers.

Printer Firmware Instructions

Kiaro! QL-120, Kiaro!, Kiaro! D, Kiaro! 200, Kiaro! 200D, Kiaro! 50, Kiaro! 50D, QL-111

1. Click the **Download** button and save the file (*.zip) to your desktop.
2. **Unzip** the file and save it on your desktop.
3. Launch the **Maintenance Utility** for your printer.

From the Windows Start Menu, choose **Start > All Programs > QuickLabel [PRINTER NAME] > [PRINTER NAME] Maintenance Utility**. A language and printer prompt will open.

4. Select a display language and the QuickLabel printer you want to connect to. Choose OK.
5. Choose the **Printer Information** tab.
6. Choose **Upgrade Firmware**. The Upgrade Firmware window will open.
7. Choose the ... button. Browse to the firmware file (*.udf) and choose **Open**.
8. Choose **Send to Printer**.